


1. Part Number: 5035J-1000

2. Photograph:

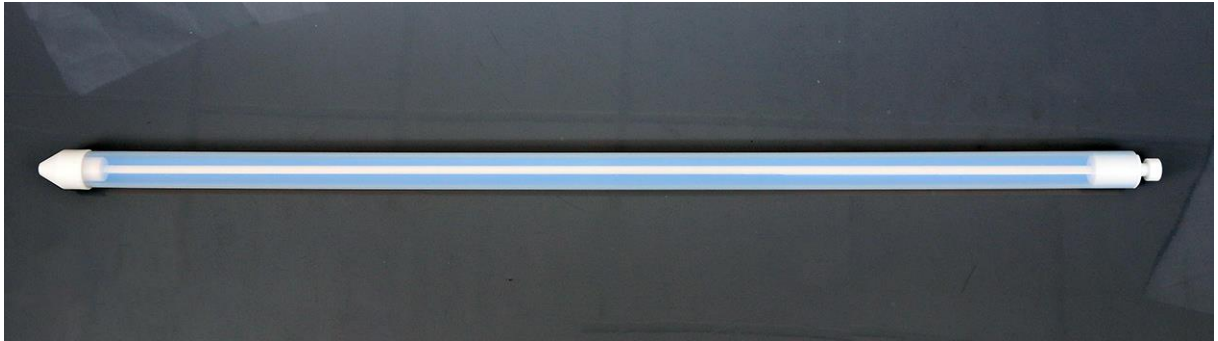

3. Product Information:

Description

Jumbo Liquid Master – 1000mm

Materials of Construction:

The product contact parts are either PTFE or FEP

- Tip PTFE
- Outer Tube FEP
- Stopper PTFE
- Cup PTFE
- Spring Mild steel (non-product contact part)
- Inner Rod PTFE & stainless steel
- Knob PTFE (non-product contact part)

Method of Construction:

The threaded parts of the device screw together. The device can be quickly dis-assembled for cleaning

Overall Length:

1060mm

Diameter of Outer Tube:

35mm

Max. Diameter of Tip:

38mm

Diameter of Hole in Tip:

9mm

Nominal Weight:

848g

Recommended Storage Conditions:

Dry and ambient temperature

4. Approval:

Signed:



Name: Kuldeep Flora

Position: Quality Manager

Date: 13-Oct-20



Sampling Systems Ltd.

4-5 Forge Mills Park, Coleshill, Warwickshire, B46 1JH, UK.

Tel: +44(0)1675 466992 Email: info@sampling.com Web: www.sampling.com